# TOURATECH

TOURING RALLYE RACING TECHNOLOGY

November 2002

01-040-1509-0

**Anleitung**

**Xenon Zusatzscheinwerfer Tiger**

## Lieferumfang:

1 x Zusatzscheinwerfer incl. Kabelsatz und Steuergerät
1 x Halter Scheinwerfer
1 x Halter Steuergerät
1 x Montagematerial

## Montage:

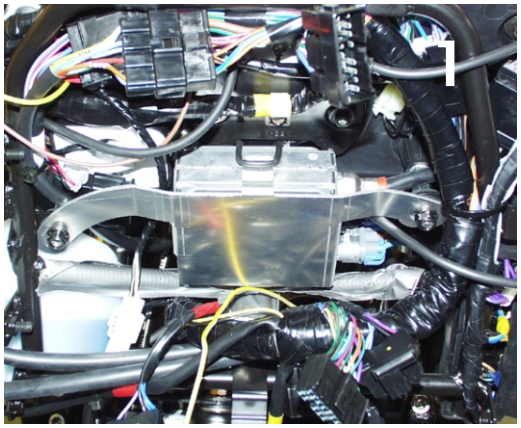


Demontieren Sie zunächst Seitendeckel, Tank, Verkleidungsseitenteile und Verkleidungsoberteil.
Verschrauben Sie den Steuergeräthalter mit Steuergerät unter den Instrumenten mit den original Muttern(Bild1).

## Elektrischer Anschluß:

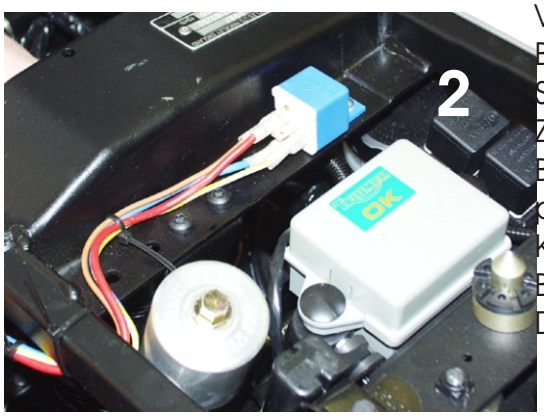


Verschrauben Sie das Relais am Rahmen hinter dem Batteriekasten mit der LiKo M5x16,U-Scheibe und Selbstsichernder Mutter.
Ziehen Sie die beiden braunen Kabel zum Minuspol der Batterie, das rote Kabel zum Pluspol der Batterie. Kabel auf passende Längen kürzen und die mitgelieferten Kabelverbinderrundöse anbringen(Kabel noch nicht an Batterie anschließen). (Bild 2)
Den Sicherungsträger in den Freiraum vor der Batterie legen.

Sehen Sie auch unsere Lenkerhalterungen in unserem Katalog oder im Internet unter

Diese Anleitung ist nach unserem derzeitigen Kenntnisstand verfasst. Rechtliche Ansprüche auf Richtigkeit bestehen nicht. Technische Änderungen vorbehalten.

# TOURATECH
TOURING RALLYE RACING TECHNOLOGY

November 2002

01-040-1509-0

**Anleitung**
**Xenon Zusatzscheinwerfer Tiger**

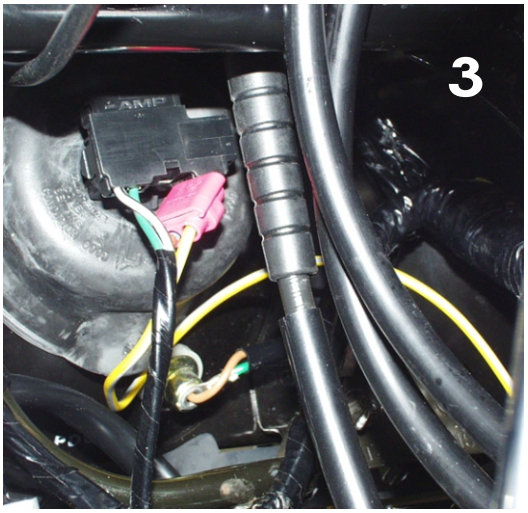

Ziehen Sie nun das Anschlusskabel vom Relais ans Steuergerät (Kabel mit Stecker) und ziehen Sie das gelbe Kabel in den Verkleidungshalter zu den Scheinwerfern (Bild3).
Schließen Sie das gelbe Kabel an der Fernlichtzuleitung (blau/gelb) mit dem mitgelieferten Kabelverbinder an.( Bild 3)

Montieren Sie die Verkleidung und Seitendeckel wieder.
Den Scheinwerfer an der Halterung mit den beiden LiKo M6x14 und U-Scheiben verschrauben.
Den Scheinwerferhalter an der linken Verkleidungsseite (Bild 4)
in den original Seitendeckelverschraubungen festschrauben. Die mitgelieferte Liko M5x 25 verwenden.
Anschließend den Stecker(Achtung:Stecker läst sich nur in einer Position aufstecken. Nicht mit Gewalt in den Scheinwerfer drücken)am Scheinwerfer anschließen und dann die Blende mit den LiKo M6x10 und U-Scheiben anschrauben.
Jetzt die Kabel an der Batterie(Pluskabel(rot) zuerst) anschließen, Sicherung einsetzen und auf Funktion prüfen.
Der Xenon-Scheinwerfer sollte sich jetzt beim Einschalten des Fernlichts mit einschalten. Alle Kabel mit Kabelbindern fixieren , Tank und Sitzbank montieren.
Der Zusatzscheinwerfer kann durch leichtes Verschieben in dem sich im Halter befindlichen Langloch ausgerichtet werden.

Sehen Sie auch unsere Lenkerhalterungen in unserem Katalog oder im Internet unter

Diese Anleitung ist nach unserem derzeitigen Kenntnisstand verfasst. Rechtliche Ansprüche auf Richtigkeit bestehen nicht. Technische Änderungen vorbehalten.

# TOURATECH

TOURING RALLYE RACING TECHNOLOGY

01-040-1509-0

**Installation Instructions**
**Auxilliary HID Light Triuph Tiger 955i**

Contains:

1 x Auxilliary HID Light incl. ballast and wiring loom
1 x HID Light bracket
1 x Ballast bracket
1 x Mounting Material

**NOTE:** Use these installation suggestions at your own risk. These instructions have not been tested by independent installers. Touratech or Touratech-USA assumes no responsibility for errors using these instructions. If you have any doubt about your ability to install electrical parts, please contact a professional installer.

## Installation:

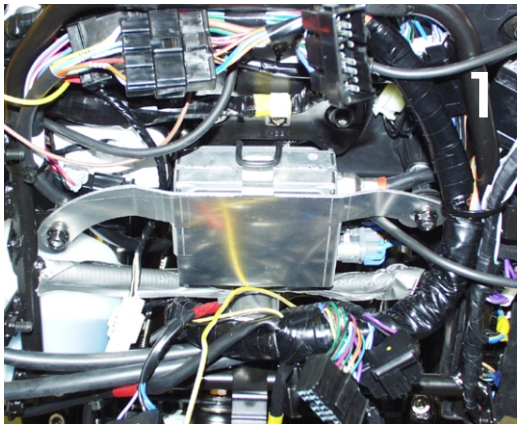


Remove first the side covers, tank and side fairings.
Attach the ballast bracket and ballast with original screws under the instruments as shown on photo 1.

## Electrical connection:

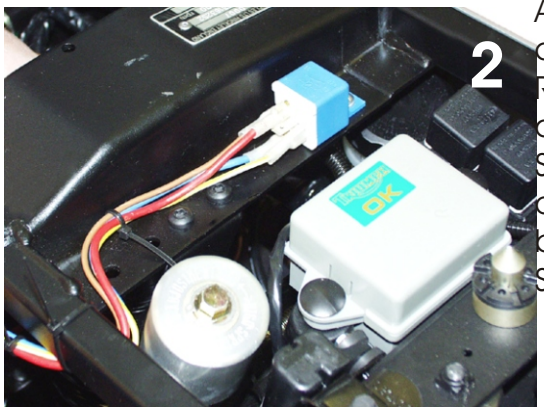


Attach the relay on the frame behind battery case with dome head screw M5x16, washer M5 and nylock nut M5.
Route both brown cables to the battery negative (-) pole and the red cable to the battery positive (+) pole.
Shorten the cable to correct lenght and attach ring-connectors on the wire ends. Do not connect wires to the battery yet though. Photo 2.
Set the fuse holder in the cavity in front of the battery.

These instructions are at our current level of knowledge. Legal requirements do not exist. Technical issues subject to change..

# TOURATECH

TOURING RALLYE RACING TECHNOLOGY

01-040-1509-0

**Installation Instructions**
**Auxilliary HID Light Triuph Tiger 955i**

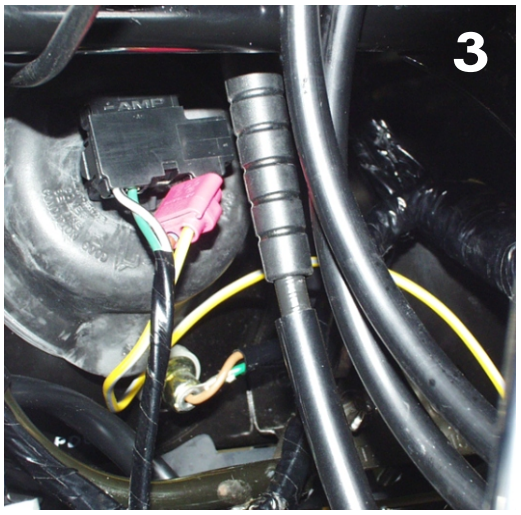

Route the power cable from the relay to the ballast (cable with connector) and the yellow cable to the faring frame and furthe to the head light.
Connect yellow cable to the highbeam 12V+supply cable (blue-yellow) with supplied scotchlock connectors. (Photo 3)

Reinstall fairings and side covers.
Attach the HID light with two dome head screws M6x14 and washers on the HID light bracket.

Attach the HID light with bracket on the left side fairing in original screw bores using M5x25 dome head screws. (Photo 4)
Push in and twist now the connector on the back of the HID light. Study the connector mechanism first and do not use force! Attach the alum. side cover on the light with two dome head M6x10 screws and washers.

Connect the wires to the battery; positive (red) first, set fuse in the fuse holder and test the light.
The HID should now come on with the high beam.

Secure all wires with cable ties, check tightness of all screws, reinstall tank and seat.

Adjust the HID to proper position and tighten screws.

These instructions are at our current level of knowledge. Legal requirements do not exist. Technical issues subject to change.